

Vantage PRO2[™] INSTALLATION DIAGRAM

Wireless Vantage Pro2 System

This diagram shows several ways to set up a wireless Vantage Pro2 or Vantage Pro2 Plus system. The outdoor sensor suite can transmit to any number of indoor receivers including WeatherLink® Console, WeatherLink Live[™], or a Weather Envoy[™]. The transmission distance between a sensor suite and the receiver is up to 1000' (300 m) line-of-sight, or up to 400' (120 m) through walls and other obstructions.

